


# T-205 User Manual

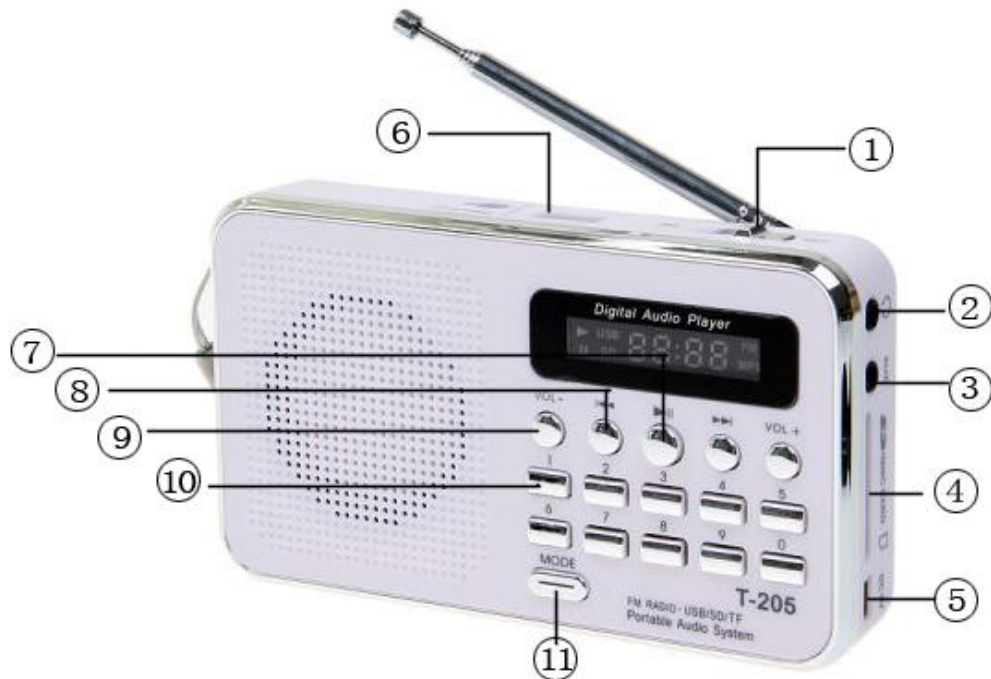

- |                       |   |
|-----------------------|---|
| ① Power Switch ON/OFF | ⑦ Play/Pause/Scan and memory radio channels |
| ② Earphone Output     | ⑧ Previous MP3/ channel.rewind              |
| ③ AUX Out             | ⑨ Volume buttons                            |
| ④ SD/MMC Card slot    | ⑩ 0-9number buttons                         |
| ⑤ DC 5V Charging jack | ⑪ Switch mode between MP3/FM/USB            |
| ⑥ USB/TF Card port    |   |

## Operating Instructions

- 1、 **ON/OFF** : power switch ,turn on or turn off this product;
- 2、 **DC 5V** charging jack,charging time will be 3-5hours.with DC5V/500MA,note that even when fully charged,the charging indicator will be still lighting,when fully charged can play 6-8hours in one third volume.
- 3、 **USB/Card**:USB or Card flash drive port,can play MP3/WMA/WAV format files ;
- 4、 **Earphone output** jack,plug in earphone,then the audio will transfer to the earphone;
- 5、 **0-9numbers** buttons:in **MP3 Mode**,number buttons 0-9 can be used to select one specific MP3(For example,continuously press buttons 1+6+8 to select the 168th MP3)but if the quantity of mp3 is not over 168,it will still play the current MP3.in **FM Mode**,umber buttons 0-9 can be used to select the channel that had already memoried.
- 6、 **| ◀ ◀** Short press for previous mp3 while long press to rewind in mp3 mode,short press for previous channel in FM mode.
- 7、 **▶ | |** Short press to Play or Pause in MP3/FM mode,long press for over 3seconds to auto scan and memory channels in FM mode.
- 8、 **MODE**:When without any audio devices plugged in ,this button doesn't work,still only play FM radio,when other devices such as TF Card or USB flash drive plugged in,this button can switch mode among TF/USB/FM.