

# Smart Sports Watch


USER'S MANUAL



Thank you for choosing our smart band. You can read this manual thoroughly to understand the use of the equipment and how to do it simply. The Company reserves the right to make changes to the contents of this manual without prior notice without prior notice.

### Product configuration:

1. Smart Watch \* 1
2. Data cable\* 1
3. Manual \* 1

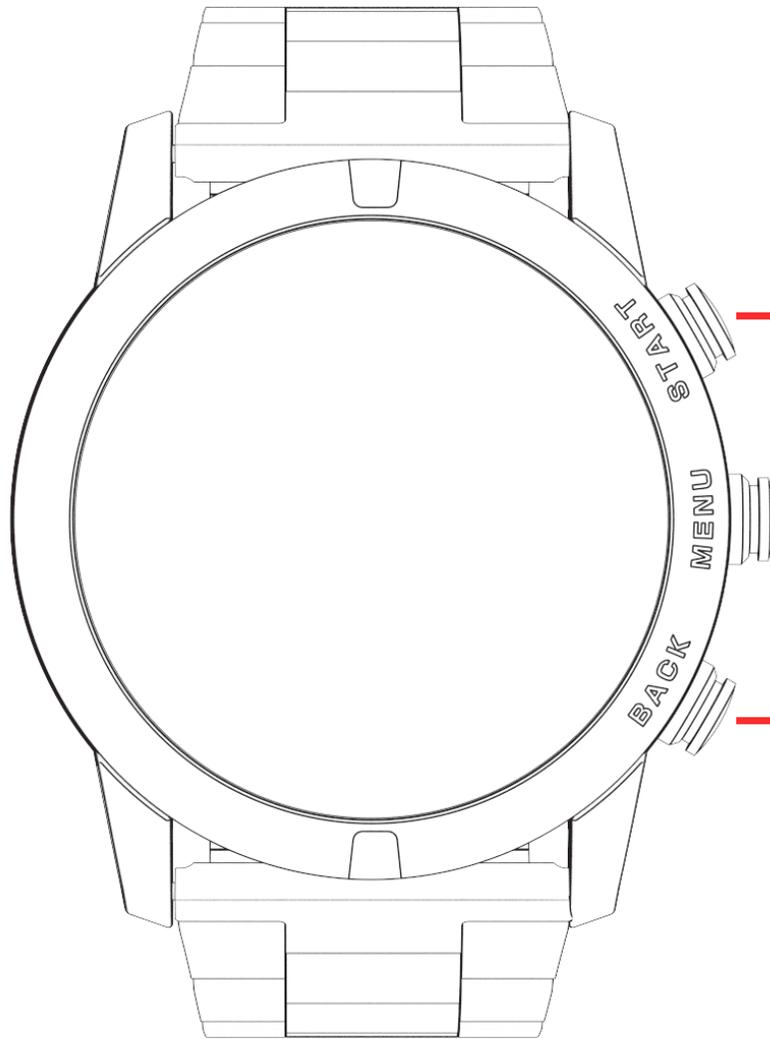

**Enter key**

**Menu option key**

**Return key/press  
and hold to turn  
on/off**

- **Pair with the phone**



Appstore



Google Play

1: IOS, Android users scan the following QR code through your mobile browser to download the APP.

2: Android phone users search: "WearHealth" in Google Play Store to download ,and IOS users download the application in App Store please.

Open the "WearHealth" application-


settings-Bluetooth-Search "sports" and connect

When the Bluetooth icon on the watch is blue,means connected success, while red for unconnected.

Note:Keep the mobile phone within 10 meters from the watch

## ● Charging instructions

Magnetic charging, as shown in the picture below. Please note direction of charging cable.

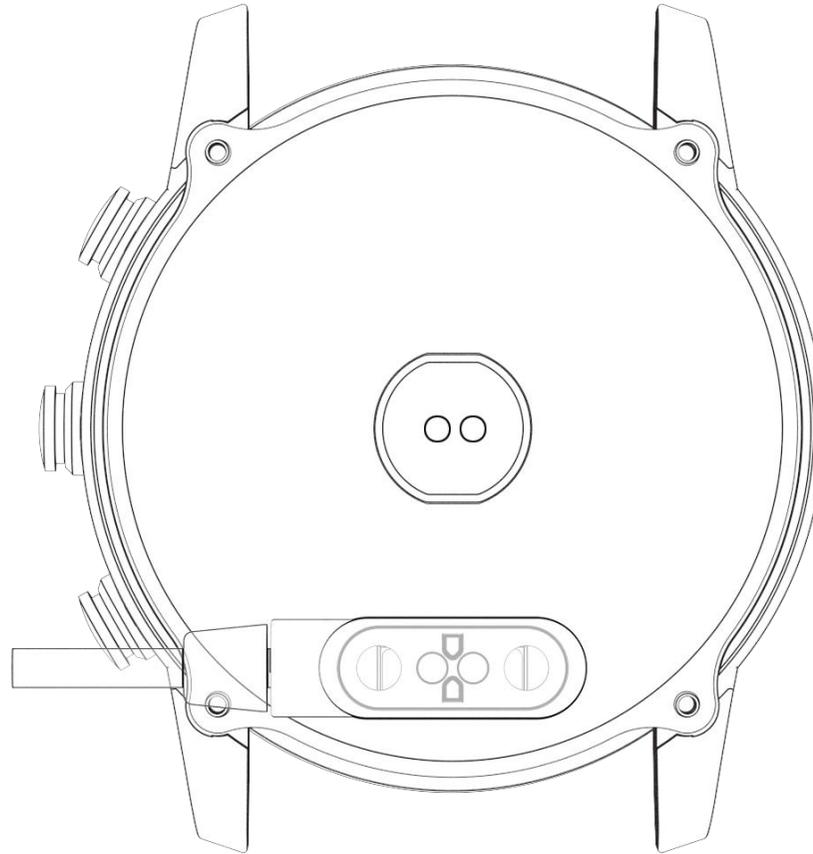

**\*Please note that two contacts of the charging cable can't contact electric conductor at the same time, otherwise it will cause circuit burning.**



## ● Step count

There are three data: distance/step/calorie, click option key to enter next page

**Step count is on 24/7 and returns to zero after storing the data before 12am and counts again.**



## ● Health

1. Enter the heart rate interface to start measuring, The heart rate is a dynamic heart rate test, and the measurement is stopped when exiting.

**If your heart rate doesn't show up or the display is unstable, you can try the following:**

- **Clean your wrists and keep them dry before wearing the**

**device.**

- **Avoid wearing sunscreen on the part where the watch is worn**

- **Wear the watch on your wrist and tighten it.**

2. Sleep monitoring

Enter to view the quality of sleep.



## ● Message

Enter the message notification to view the several messages or notifications.



## ● Exercise

The exercise mode has multiple motion modes to choose from. press enter key to start exercising.

Press the touch key to record the number of laps during exercise

Press enter key to pause. Press return key to end exercising after pausing



## ● Dial

Enter and select dial



## ● Compass

Draw 8 to verify before entering compass. Re-verify in case of magnetic field interference



## ● Timer

Press enter key to start timing



## ● Setting

1. Locate phone
2. Vibration(switch)
- 3.Reset (switch)
- 4.About (can view MAC address, firmware version number)

## ●FAQ

\*Do not expose this device to overcooling or overheated conditions for a long time, otherwise it will cause permanent damage.

\*Why can't wear watch when taking a hot bath?

As bath water temperature is high, it will generate mass steam which is in gaseous phase and characterized by small molecule radius. It is easy to penetrate through watch housing gap. When temperature lowers, it will become liquid phase water drop, which is easy to cause short circuit in the watch, resulting in damaged circuit board and watch.

\*The watch can't start up or charge

If your newly received watch can't start up, it maybe because battery is under protection due to collision during watch transportation. Plug in charging cable to activate the watch.

If your watch can't start up due to too low battery or the watch has not been used for a long time, please plug in USB cable and charge for half an hour for activation.

# ●Firmware upgrade

- 1.Enter “WearHealth” when the blue tooth is normally connected.
- 2.Enter APP, click device to upgrade firmware.
- 3.There is a prompt for upgrade in case of new version release.  
(Upgrade takes 3-5 minutes)
- 4.After upgrade is completed, the watch will be automatically turned on and reconnected to device. Please disconnect blue tooth and enter system setting of the watch to reset and connect again.
- 5.Don't make any move in case that the progress bar is stuck in the process. Take your time until the upgrade is completed.

# ●Warranty

1. If it appears quality problems caused by manufacturing, materials, design within one year (since the day of purchase) , we will offer free warranty for. We will offer free warranty for battery and adapter within 6 months. Premise is using normally and correctly.
2. About the fault caused by the users personal reasons, we don't offer free warranty, as follows:
  - 1). Disassemble or refit the product.
  - 2). Caused by immodesty drop
  - 3). All artificial damage or misuse (such as: make water into the host, the external force shatter, scratch damage of peripheral components, etc.), all these are beyond the scope of the warranty.
3. When ask for free warranty, you must provide a warranty card with the

seal of purchase place and purchase date.

4. If you met problems during use, please contact the shop customer service which you bought from.

5. Please make the final products as the standard.

Date of purchase:

IMEI code:

Buy store:

Customer signature:

Clerk Signature:

Shop stamp: